




Kooltherm® K10 FM Soffit Board


INSTALLATION GUIDE



Kingspan **Kooltherm**® K10 FM Soffit Board can be fully restrained to a concrete soffit by the use of minimum 11 No. approved insulation fasteners with a minimum head diameter of 35 mm.

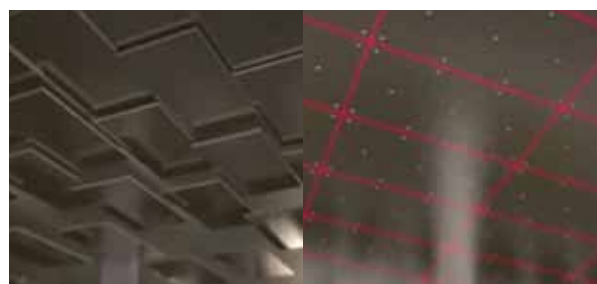


- Board joints can be either staggered or squared and taped with a minimum 96 mm wide appropriate aluminium foil tape.

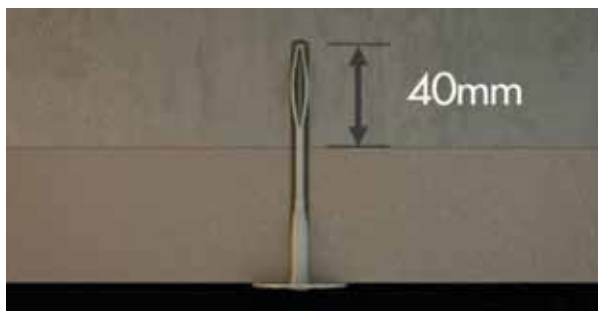

- The fasteners should be evenly distributed over the whole area of the board and must offer a minimum 40 mm penetration into a solid substrate.



- Use a plastic squeegee to apply appropriate pressure to the tape.

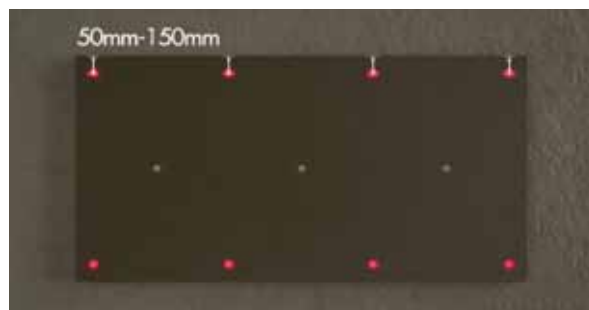

- 4 No. fasteners along each length - no less than 50 mm - no more than 150 mm from edge of board, 3 No. fasteners along the middle (Offset from edge positions as per diagram).

Where the board may be subject to external wind pressure, the requirement for additional fixings should be assessed in accordance with appropriate wind load standards.

This is a general guide only. Please contact us for full details, including cutting and taping instructions.



Available in New Zealand from:



Freephone: 0800 45 4000

Email: sales@forman.co.nz

www.forman.co.nz